# R721-5-60 RIVETLESS NUT PLATE REMOVAL TOOL


Technical Data Sheet, Page 1 of 2

**DIMENSIONAL DATA** (all measurements in Inches, see figure 1) Tool weight (without riveter): 0.4 Lbs (0.181 Kg).

#### **CHOICE OF RIVETERS**

- G704B Cherry® Riveter;
- G747 Cherry® Riveter
- G750A Cherry® Hand Riveter with adaptor 750A-088

Note: May require double triggering when used with G747.

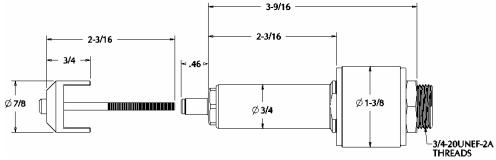

# Figure 1

# **MOUNTING INSTRUCTIONS**

- Attach riveter to air source for correct piston positioning; on the hand riveters, make sure that the
  pressure has been released and that the correct adaptors are used.
- Push against the riveter piston and thread pulling head onto both piston and housing of the riveter at the same time.
  - -DO NOT tamper with the jam nut, as it controls the removal load.

# **USAGE**

This tool was designed to remove rivetless nut plate fasteners installed in Ø 0.404/0.408 holes

# **BEFORE USE, MAKE SURE THAT:**

- The correct removal tool is used and is properly mounted on the recommended riveter.
- Proper Air source is connected (see riveter specification for recommended pressure).
- Make sure that the tool is clean and in good working condition
- Make sure that the nut is snug against the load control element (item 5); do not over-tighten.

# **DURING OPERATION**

- Inspect the active area of the nosepiece regularly.
- Keep the tool clean, especially the nosepiece and jaws; pay special attention sealants are used.
- If stem slippage occurs, the jaws need to be either cleaned or replaced.

# **REMOVAL PROCESS**












# R721-5-60 RIVETLESS NUT PLATE REMOVAL TOOL

Technical Data Sheet, Page 2 of 2

# PREVENTATIVE MAINTENANCE

- Clean the insert, jaws and jaw cavity every 1,000 installations, or whenever failures occurs.
- Lubricate outside configuration of the jaws with Lubriplate® or similar light lubricant.
- Inspect regularly and keep the active area clean and in good working condition.
- Replace worn or broken components.
- At assembly, tighten jam nut (item 7) snug against the load control element (item 5).

Do not over-tighten and use Loctite® to lock the jam nut in place.

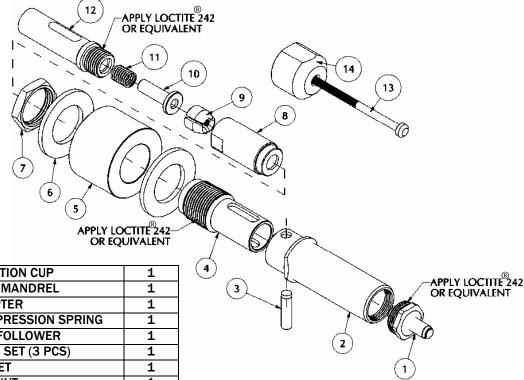

#### **PARTS LIST**

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	747-096	NOSEPIECE, INSERT	1
2	747-089	SLEEVE	1
3	P-143	DOWEL PIN	1
4	747-090	SLEEVE EXTENSION	1
5	747-102	LOAD CONTROL ELEMENT	1
6	P-1437	WASHER	2
7	671A16	JAM NUT	1
8	747-048	COLLET	1
9	563C35	JAWS SET (3 PCS)	1
10	747-049	JAW FOLLOWER	1
11	P-1423	COMPRESSION SPRING	1
12	747-088	ADAPTER	1
13	747-075	PULL MANDREL	1
14	747-076	REACTION CUP	1

# **GENERAL / TECHNICAL QUESTIONS**

1224 E. Warner Avenue Santa Ana, CA 92705 USA 1-714-850-6022 (Phone) 1-714-850-6093 (Fax)

LOCTITE® is a registered trademark of Henkel Corporation. LUBRIPLATE® is a registered trademark of Fiske Brothers Refining Co.

#### WARRANTY

Seller warrants the goods conform to applicable specifications and drawings and will be manufactured and inspected according to generally accepted practices of companies manufacturing industrial or aerospar fasteners. In the event of any breach of the foregoing warranty, Buyer's sole remedy shall be to return defective goods (after receiving authorization from Seller) for replacement or refund of the purchase price, at the Seller's option. Seller agrees to any freight costs in connection with the return of any defervice goods, but any costs relating to removal of the defective or nonconforming goods or installation of replacement goods shall be Buyer's responsibility. SELLER'S WARRANTY DOES NOT APPLY WHEN ANY PHYSICAL OR CHEMICAL CHANGE IN THE FORM OF THE PRODUCT IS MADE BY BUYER. THE FOREGOING EXPRESS WARRANTY AND REMED'ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES; ANY IMPLIED WARRANTY AS TO QUALITY, FITNESS FOR PURPOSE, OR MERCHANTABILITY IS HEREBY SPECIFICALLY DISCLAIMED AND EXCLUDED BY SELLER. This warranty is void if seller is not notified in writing of any rejection of the goods within ninety (90) days after receipt of the goods by buyer.

Seller shall not be liable under any circumstances for DAMAGES ARE HEREBY EXPRESSLY EXCLUDED. ces for incidental, special or consequential damages arising in whole or in part from any breach by Seller, AND SUCH INCIDENTAL, SPECIAL, OR CONSEQUENTIAL

Our policy is one of continuous development. Specifications shown in this document may be subject to changes introduced after publication.

NOTE: The properties, strength, dimensions, installed characteristics and all other information in these materials are for guidance only to aid in the correct selection of the products described herein and is not intended or implied as part of the above warranty. All applications should be evaluated for functional stability and available samples of the described parts can be requested for installed tests, suitability and evaluations.

For more information please contact our Technical Services Department at tel. 714-850-6022



1224 East Warner Ave, Santa Ana. Ca 92705 Tel: 1-714-545-5511 www.cherryaerospace.com

TS-H721-5-60 Rev: A Date: 02/05/07 CR: 07-0097